

CHECKLISTS CONTAINING MINIMAL STEPS TO OPERATE THE COOLSKY DC-9 IN FSX

BEFORE USING THESE CHECKLISTS:

TURN OFF SYSTEM FAILURES IN THE FSX MENU

SET COLD & DARK COCKPIT IN THE COOLSKY FLIGHT CENTER

THESE CHECKLISTS ARE MEANT FOR THOSE WHO LIKE TO KEEP THE WORKLOAD LOW WHILE STARTING OUT OR FLYING ONLINE.

CREATED IN FLAACH, SWITZERLAND BY THOMAS "MASTER WARNING" THURNHEER THOMAS.THURNHEER@GMX.CH

NOW SADDLE UP, COWBOY!

PRE-BOARDING CHECKLIST

VOLT SELECTOR BATT VOLT

MASTER BATTERY ON

A/C SUPPLY L OFF / R OFF

CABIN ALTITUDE CONTROL AUTO

AUX HYD PUMP OFF

APU DOORS AUTO

START PUMP ON

APU MASTER START

APU POWER BUS L ON / R ON

UPPER RIGHT FUEL PUMP ON

START PUMP OFF

PANEL / PEDESTAL LIGHTS AS REQUIRED

APU AIR ON

APU GND SERVICE BUS ON

GALLEY ON

PNM. X-FEED VALVES L OPEN / R OPEN

A/C SUPPLY L AUTO / WAIT 30 SECONDS / R AUTO

RAM AIR ON

SEATBELT / SMOKING SIGNS ON

EMERGENCY LIGHTS ARMED

BEFORE START CHECKLIST

FUEL QUANTITY CHECK

OIL QUANTITY CHECK

HYDRAULIC FLUID QUANTITY CHECK

ICE PROTECTION CAPTAIN

WINDSHIELD ANTI-ICE ON

FUEL PUMPS CTR TANKS ON / ALL ON

ALTIMETER SET

RADIOS AND AVIONICS SET

TRANSPONDER STANDBY

T/O WARNING CHECK (ADVANCE THROTTLES)

PARKING BRAKE RELEASE

STABILIZER TRIM SET FOR T/O ACC. TO DISPATCH

SPOILERS / FLAPS CHECK RETRACTED

BRAKE SELECTOR BOTH

ATC IFR & STARTUP CLEARANCE RECEIVED

ENGINE START CHECKLIST

ANTI COLLISION LIGHTS ON

STROBE / POSITION LIGHTS BOTH

IGNITION BOTH

A/C SUPPLY L OFF / R OFF

PNM. X-FEED VALVES L OPEN / R CLOSED

ENGINE START SWITCH ON LEFT

LEFT FUEL CONTROL LEVER ON AT 10–20 % N2

ENGINE START SWITCH OFF LEFT

N2 CHECK 55-58 %

N1 CHECK 30 %

PNM. X-FEED VALVES L CLOSED / R OPEN

ENGINE START SWITCH ON RIGHT

RIGHT FUEL CONTROL LEVER ON AT 10-20 % N2

ENGINE START SWTICH OFF RIGHT

N2 CHECK 55-58 %

N1 CHECK 30 %

OVERALL ENGINE INSTRUMENTS CHECKED

PNM. X-FEED VALVES L CLOSED / R CLOSED

IGNITION OFF

BEFORE TAXI CHECKLIST

ENGINE ANTI ICE AS REQUIRED

FUEL HEATERS AS REQUIRED

APU POWER BUS L OFF / R OFF

A/C SUPPLY L AUTO / R AUTO

GENERATORS CHECK

APU AIR OFF

APU GND SERVICE BUS OFF

APU MASTER OFF

ALT HYD PUMP ON

ENGINE HYD PUMPS L HI / R HI

AUX HYD PUMP ON

FLAPS SET TO T/O SETTING

YAW DAMPER ON

AUTOPILOT SERVOS ALL ON

AUTOPILOT HDG BUG SET TO RWY HDG

GROUND LIGHTS AS REQUIRED

TAXI CHECKLIST

ANTI SKID ON WHEN CLEAR OF GATE AREA

BRAKES CHECK DURING TAXI

INSTRUMENTS PROPER INDICATION DURING TURNS

BEFORE TAKE-OFF CHECKLIST

RUDDER TRIM CHECK 0

AILERON TRIM CHECK 0

STABILIZER TRIM VERIFY SET ACC. TO DISPATCH

SPEED BUGS SET

FLAPS VERIFY SET FOR T/O

AUTOPILOT SERVOS VERIFY ALL ON

A/C SHUTOFF AUTO

LANDING LIGHTS ON

GROUND LIGHTS OFF

TAKE-OFF CHECKLIST

THRUST LEVERS 1.4 EPR THEN T/O THRUST

POSITIVE CLIMB GEAR UP

AUTOPILOT ON AT '500 AGL

FLAPS / SLATS RETRACT

THRUST LEVERS CLIMB THRUST (INDICATED MAXIMUM)

AFTER TAKE-OFF / CLIMBOUT CHECKLIST

GEAR LIGHTS CHECK EXTINGUISHED

A/C SHUTOFF OVERRIDE

AUX HYD PUMP OFF

ENGINE HYD PUMPS L LO / R LO

ALT HYD PUMP OFF

LANDING LIGHTS OFF

SEATBELT / SMOKING SIGNS OFF AT 10'000 FEET

DESCENT / PRELIMINARY LANDING CHECKLIST

DESCENT PLANNING CALCULATE

SEATBELT / SMOKING SIGNS ON

CABIN PRESSURE CONTROL LANDING ALTITUDE SET

AUX HYD PUMP ON

ENGINE HYD PUMPS L HI / R HI

ALT HYD PUMP ON

ALTITUDE ALERTER SET

SPEED BUGS SET FOR APPROACH

IGNITION BOTH

ALTIMETER SET

APPROACH / LANDING CHECKLIST

LANDING LIGHTS ON

FLAPS 15 AT 5NM BEFORE LOCALIZER INTERCEPT

FLAPS 25 AT G/S INTERCEPT

LANDING GEAR DOWN AND LOCKED

A/THR AS REQUIRED

FLAPS 40

AUTOPILOT OFF AT 100 FT 'AGL

THRUST LEVERS RETARD

REVERSE THRUST ENGAGE AT MAIN GEAR TOUCHDOWN

BRAKES MINIMAL

AFTER LANDING / TAXI CHECKLIST

GROUND LIGHTS AS REQUIRED

LANDING LIGHTS OFF

ANTI SKID OFF WHEN APPROACHING GATE AREA

APU MASTER START

APU POWER BUS L ON / R ON

APU AIR ON

ENGINE ANTI ICE OFF

FLAPS 15 UNTIL APPROACHING GATE AREA

TRANSPONDER STANDBY

LET'S GET OUT OF HERE CHECKLIST

PARKING BRAKE SET

BRAKE PRESSURE CHECK GREEN

WINDSHIELD ANTI ICE OFF

FUEL CONTROL LEVERS L OFF / R OFF

SEATBELT / SMOKING SIGNS OFF

FUEL PUMPS OFF

PNM. X-FEED VALVES L OPEN / RIGHT OPEN

GROUND LIGHTS OFF

STROBE / POSITION LIGHTS OFF

ANTI COLLISION LIGHT OFF

FLAPS RETRACT

AUX HYD PUMP OFF

ENGINE HYD PUMPS L OFF / R OFF

ALT HYD PUMP OFF

A/C SUPPLY L OFF / R OFF

APU POWER BUS L OFF / R OFF

APU MASTER OFF

MASTER BATTERY OFF

ALL SWITCHES VERIFY OFF / STANDARD POSITION